

Use Word Finder

Use Word Finder to find a word and see where it is.

1. Select **ABC/123** to open the keyboard.
2. Select **Find Word**, type the word you are looking for, and select **Find**.
3. One or more paths will appear if the word is available.
4. Select a path to go to the word. Follow the highlighted buttons to step through the button sequence.

Edit a Button

1. Find the button you want to edit, then select **Menu → Edit Page**.
2. Select the button to edit → **Edit this Button**.
3. Change the **Button Label** to update what you see on the button.
4. Change the **Button Message** to update what the button says.
5. Change how the words on this button are pronounced:
 - a. Type how the words sound in **Alternate Pronunciation**.
 - b. Select **Pronounce** to test the message.
6. Change the **Image** for the button.
 - a. Choose **Select Image** to look for a symbol.

- b. Choose **Import Photo** to use a photo from the gallery.
- c. Choose **Use Camera** to take a photo.
- d. Choose **Clear Image** to delete the image.

7. Select **Save → Done**.

Add a New Page from a Button

1. Find the button you want to use to go to a new page. Select **Menu → Edit Page**.
2. Select the button to edit → **Edit this Button/Create New Button**.
3. Change the **Button Label**, **Button Message**, and **Image**.
4. Scroll to **Button Actions → Add →** scroll to **Navigate**.
5. Select the **plus sign → New Blank Page →** enter **Page Name → Save → Done**.
6. Select the button to open the new page and continue by editing buttons on the new page.

Menu Lock

Use Menu Lock to block access to the menu. There are two ways to lock the menu:

Use Menu Passcode

1. Select **Menu → Settings**. Scroll to the **Editing** section.

2. Type a passcode and toggle on **Use Menu Passcode**.
3. Select the **blue checkmark** ✓.
4. To unlock the menu, select **Menu → enter the passcode**.

If you forget the menu passcode, enter **72584556**

Remove Editing from the Navigation Bar

1. Leave the TouchChat app, go to **iOS Settings**.
2. Scroll on the left panel and select **Apps**.
3. Scroll on the right panel and select **TouchChat**.
4. Toggle **Allow Editing** to **Off**.
5. Go back to the TouchChat app.
6. To Allow Editing again, go to **iOS Settings → Apps → Toggle Allow Editing On**.
7. Go back to the TouchChat app.

Change the Voice

1. Select **Menu → Settings**. Scroll to the **Speech** section.
2. Select the language/voice combination you want to change.
3. Select **Voice** to open the list of voices in that language.

4. Select the **play icon** next to a voice to try it.
 - a. Select the **voice name** to choose it if already downloaded.
 - b. Select the **download icon** then select the voice name to choose it. Wi-Fi is needed to download the voice to your iOS device.
5. Select the **back arrow** → select the **blue checkmark** ✓.

Change the Way the Device Pronounces a Word

1. Select **Menu → Edit Pronunciation**.
2. Select the **plus sign** +.
3. Type the correct spelling under **Word**.
4. Type how the word sounds under **Pronounce As**.
5. Select **Pronounce** to test it.
6. Select **Save** → the **blue checkmark** ✓.

Hide & Show Buttons

Use Hide & Show buttons to show fewer words on a page for a short time.

Hide Button(s)

1. Go to the page where you want to hide buttons.
2. Select **Menu → Edit Page → Menu → Hide Mode**.

3. Select the button(s) to hide.
4. Select **Done**.

Show Button(s)

1. When you are done, select **Menu → Edit Page → Menu → Hide Mode**.
2. Select the button(s) to show.
3. Select **Done**.

Connecting Multiple Language Vocabulary Files

1. Find the button you want to use to go to another vocabulary. Select **Menu → Edit Page**.
2. Select the button to edit → **Edit this Button/Create New Button**.
3. Change the **Button Label**, **Button Message**, and **Image**.
4. Scroll to **Button Actions** → **Go to Vocabulary**.
5. Choose the vocabulary file you want to go to → **Save** → **Done**.
6. Select the button to go to the other vocabulary file.
7. Follow the same steps to create a button to go back to the first vocabulary file.

Back Up a Vocabulary File

Choose the backup option that works best for you: AirDrop®, Dropbox®, Google Drive®, or Email. For more specific information on using your preferred storage space, use the Unity AAC App Manual or Video Tutorials.

1. Select **Vocab → Choose New Vocab**.
2. Select **Menu → Import/Export Vocab**.
3. Select **Export and Share**.
4. Select the vocabulary file you want to back up/export.
5. Select **Done** and then select the method you want to use to share the file.

Find Video Tutorials

[PRC-Salttillo YouTube Channel](https://www.youtube.com/channel/UCvXqzqzqzqzqzqzqzqzqzqz) → TouchChat App section

